 






The SAGE jumper must be installed when the 1026 LDS is used in a SAGE meetinghouse. It is NOT installed for HERITAGE or LEGACY meetinghouses.

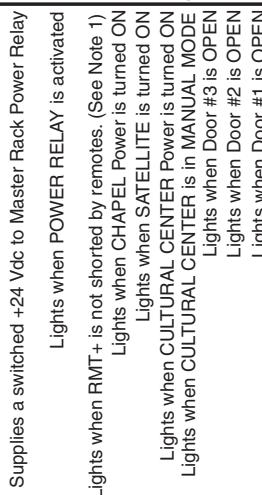

SAGE JUMPER

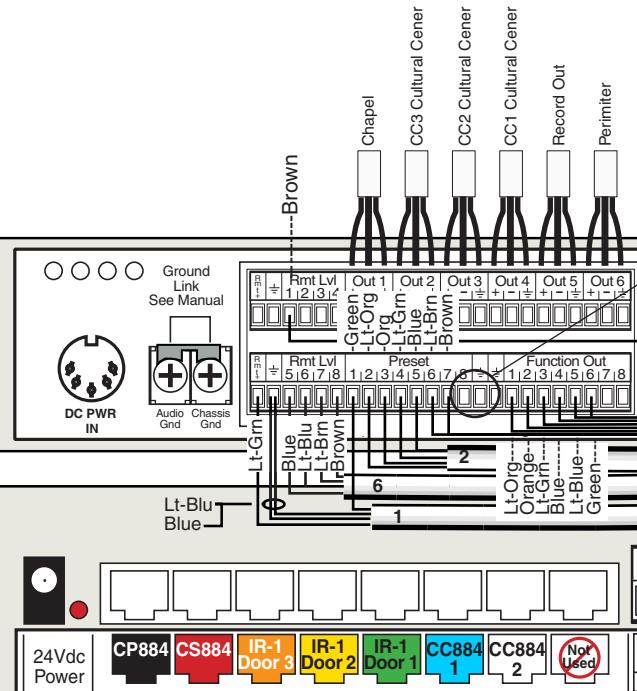


Note 1  
This LED is a SPECIAL MONITOR. It Should ALWAYS be lit. If it is not lit, there is a problem with the RMT+ power supplied by the 1026. Most likely the problem is due to a short somewhere in the wiring of the CP-884, CS-884 or CC-884 remote controls. If the RMT+ LED is off, first check the connection to the 1026. Then disconnect ALL RJ45 connectors going to the CP-884, CS-884 and the two going to the CC-884. If the LED lights while the remotes are disconnected the RMT+ is being shorted to ground somewhere in the wiring associated with the remotes.

These seven LEDs are not used on the 1026-IF and should be ignored.

These connectors are not used on the 1026-IF.

The diagram illustrates a connection between two audio components. On the left, a rectangular box labeled "From the Chapel Amplifier" is connected to a second rectangular box on the right labeled "To the Overflow Loudspeakers". A thick black arrow points from the left box to the right box, indicating the direction of signal flow. Above the right box, the text "Lights, when OFF, FLOOR REFLAY is activated" is written vertically.

## – Inputs

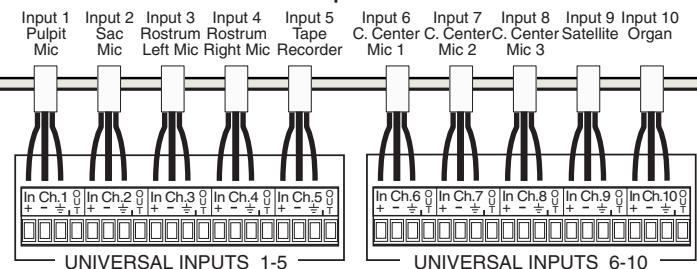

— UNIVERSAL INPUTS 1-5 —

— UNIVERSAL INPUTS 6-10 —

## Ivie 1026-IF Wiring Diagram