

Front



Rear

The CP-884C remote control is intended for use in Ivie LDS meetinghouse audio systems. The CP-884C provides the remote control functions for the Chapel portion of the system and replaces the CP-884. Connection to the CP-884C is by means of an RJ45 connector.

A five LED bargraph indicates the current level setting.

The connection to the podium Up/Down controls is via a three pin euro-block connector. The CP-884C provides a switched +24Vdc to the podium.

Specifications


Electrical: LED 24Vdc
 All switches - SPST momentary
 Podium Up/Down supplies +24Vdc
 LED Level indicator

Physical: Color - Brown & Gold
 Size - W 2.5 in H 6.0 in
 (no escutcheon supplied)

IMPORTANT JUMPER SETTING

CP-884C connection to Ivie IF

The CP-884C provides a **switched +24Vdc** to activate the pulpit relays.

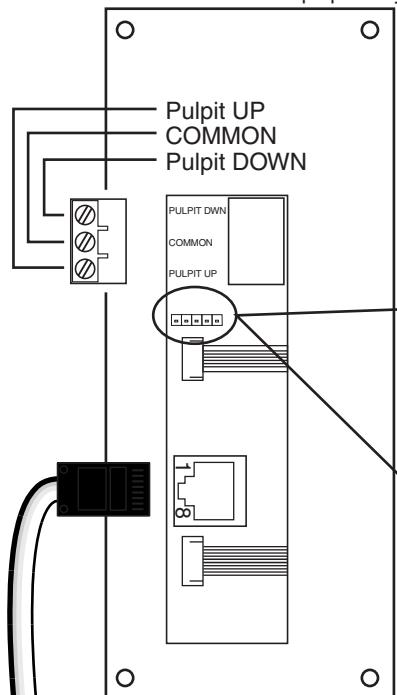

IMPORTANT Jumper setting

The CP-884C is used with either the 884+ or 1026 Ivie mixers. As shipped from the factory a jumper is installed which allows the CP-884C to be used with the 1026. Remove the jumper if the CP-884C is to be used with the 884+ mixer.


JUMPER INSTALLED
for use with 1026



JUMPER REMOVED
for use with 884+



1026-IF or 884-IF

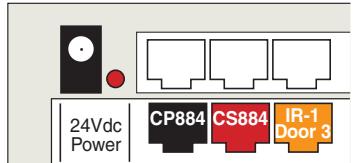

Wiring between the CP-884C and the 884-IF is accomplished using a conventional CAT-5 cable conforming to the EIA 568B standard.


EIA/ 568B Color Code for RJ45

8	Orange	White/Orange
7	Green	White/Green
6	Blue	White/Blue
5	Blue	Blue/White
4	White	White/Green
3	Green	Orange/White
2	Orange	White/Orange
1	White	White/White

Contact side showing
Tab on back

"PIG-TAIL" WIRING INSTRUCTIONS


CP-884C connection to Ivie Mixer


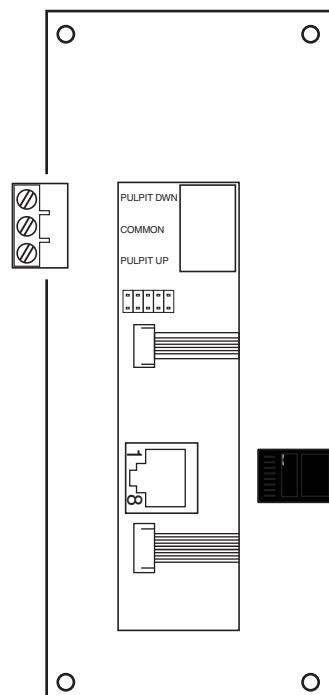


Do not attempt to crimp an RJ45 directly to DC cable.
The connection will be unstable and unreliable and is not supported by Ivie. Instead, make a short pig-tail out of CAT-5 cable with an RJ45 crimped to one end (use EIA 568B standard - see below) and the other end stripped back and broken out by color. Connect the pig-tail to the DC cable by means of small wire nuts or other gas-tight, reliable connection.



RJ-45 Pin Connections

- Pin 8 - Gnd
- Pin 7 - Gnd
- Pin 6 - Function Out 1
- Pin 5 - +24V DC
- Pin 4 - +24V DC
- Pin 3 - RMT +
- Pin 2 - Rmt Level A
- Pin 1 - Combine 2+3


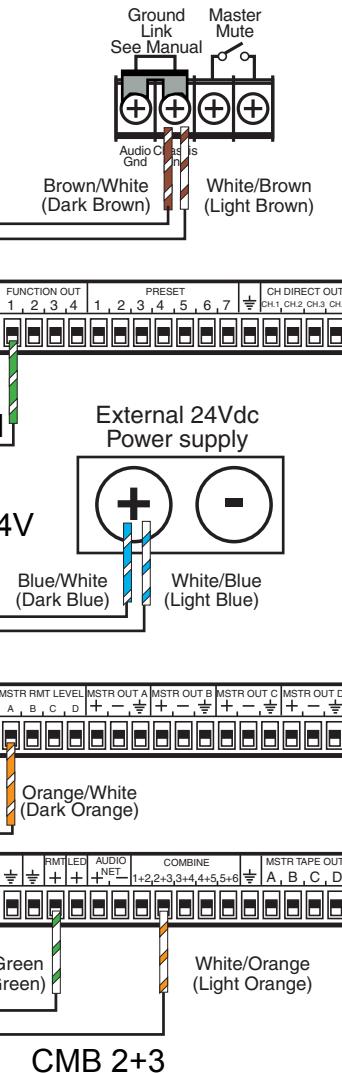


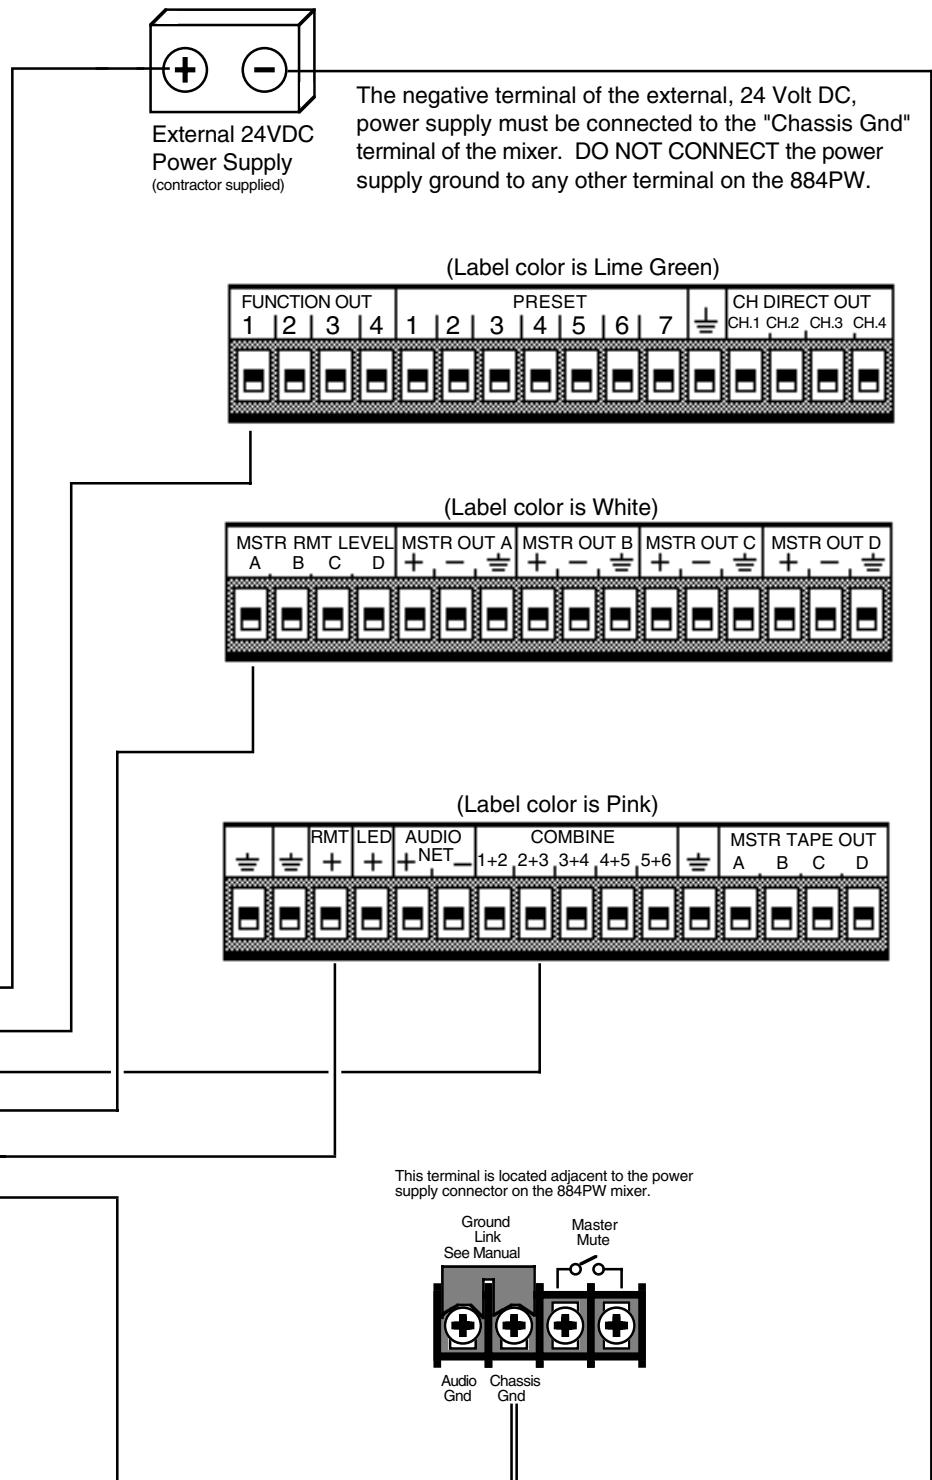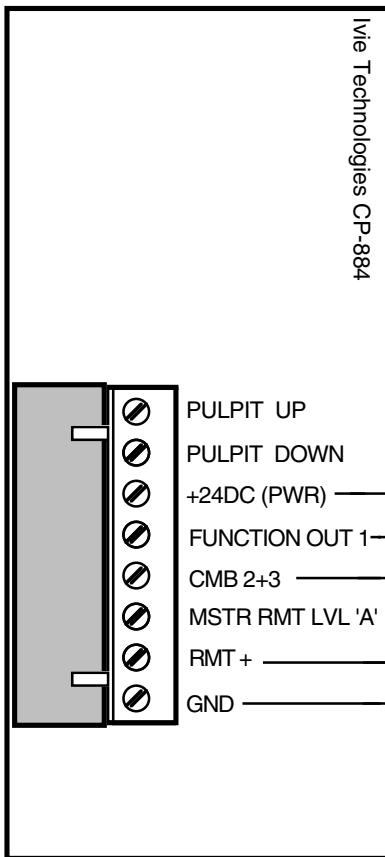

Ivie CP-884 to Ivie 884+ Wiring Diagram

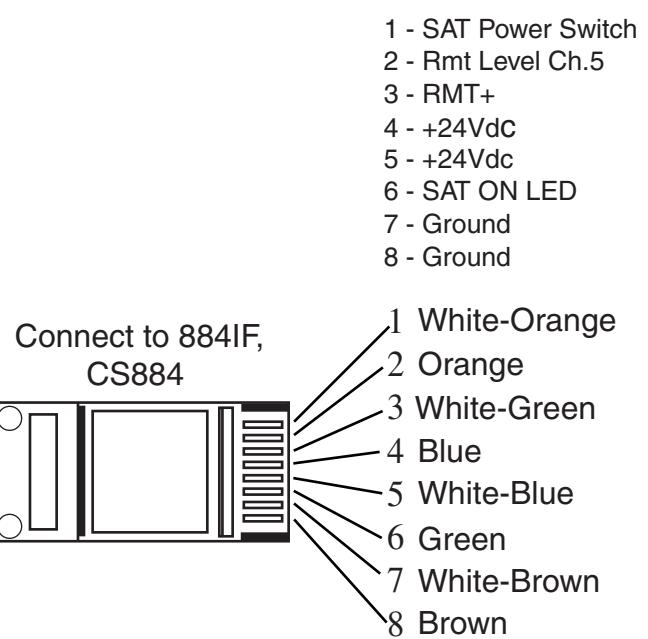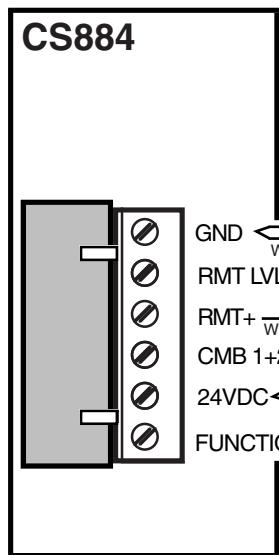

Ivie CS-884 to Ivie 884IF+ Wiring Diagram

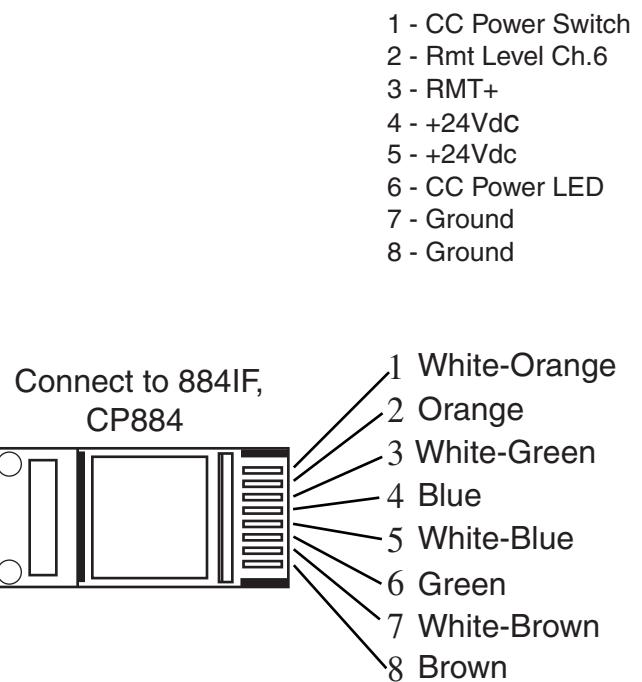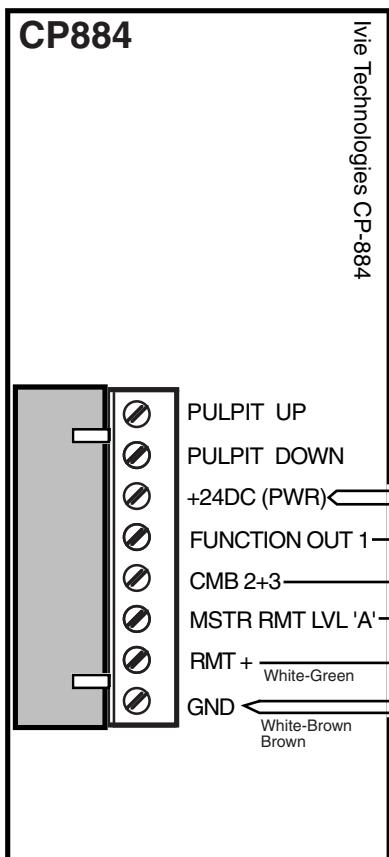

Ivie CP-884 to Ivie 884IF+ Wiring Diagram