


# Programming the RM1 & RM2

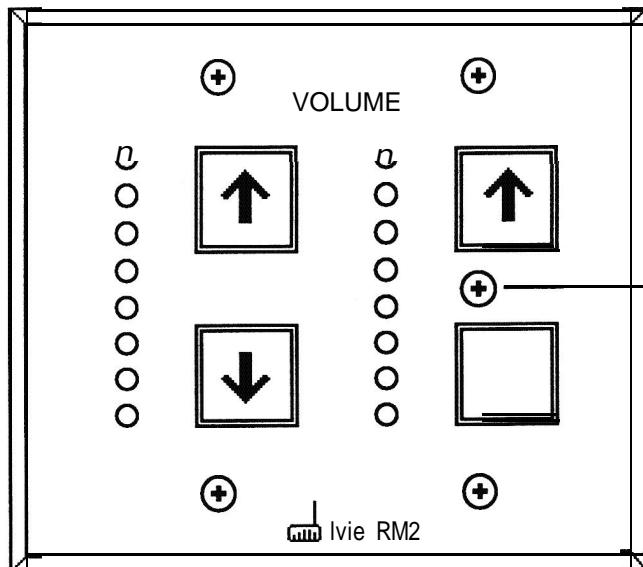

-Remove screw to access the programming pushbutton.

STEP 1 - Remove the middle philips head screw to expose the programming button.

STEP 2 - Press the programming button. The top LED on each channel should now be blinking.

STEP 3 - Use the Up and Down arrow pushbuttons on each channel to adjust the maximum sound level desired in the room.

STEP 4 - Press the programming button again. The bottom LED on each channel should now be blinking.

STEP 5 - Use the Up and Down arrow pushbuttons on each channel to adjust the minimum sound level desired in the room.

STEP 6 - Press the programming button again. The middle LED on each channel should now be blinking.

STEP 7 - Use the Up and Down arrow pushbuttons on each channel to adjust the desired level in the room whenever the system is first turned on(power up default).

STEP 8 - Press the programming button to exit the programming mode and replace the philips head screw.

## WIRING DIAGRAM FOR RM2 ANALOG REMOTE CONTROL

1) The RM2 will work with Ivie 784P, 804, 804R, 808, 808R mixers and Electro-Voice 2504, 2505, 2508, 2509 mixers.

2) Connect three wires, as shown below, between the RM1 and mixer. These are DC control lines and do not require shielding. Refer to the wire gauge chart below to select the proper wire gauge.

784P, 804/R, 808/R,  
2500 Series Mixers

